



©2019 TENCATE GEOSYNTHETICS

### TOP OF SLOPE ANCHOR TRENCH

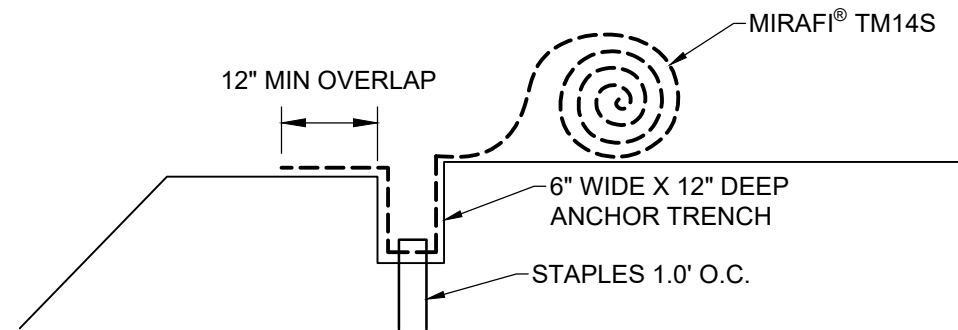


STEP 1

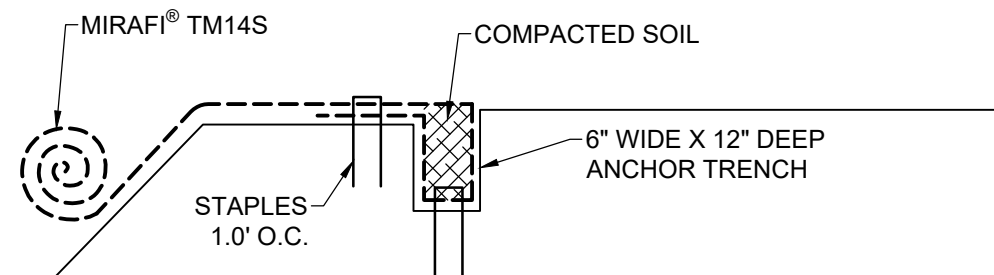


STEP 2

### BOTTOM OF SLOPE ANCHOR TRENCH

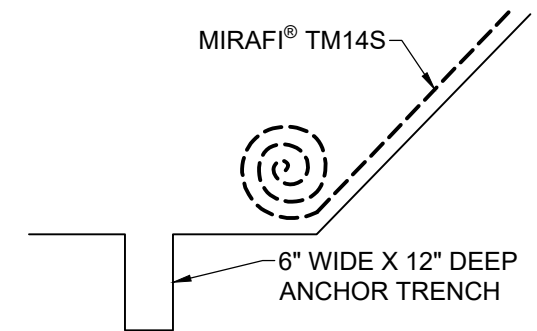

STEP 1

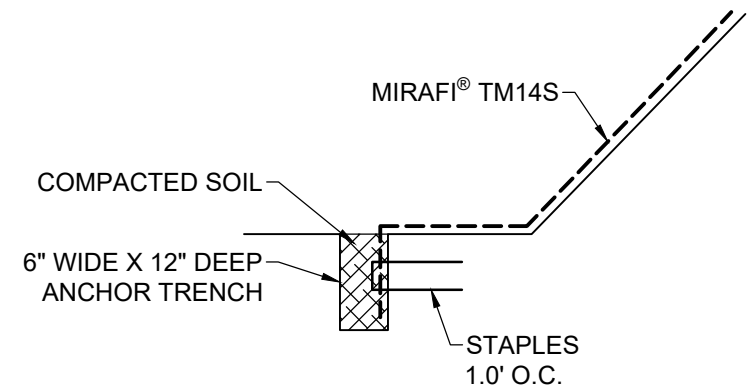

STEP 2

**TENCATE**  
GEOSYNTHETICS

365 SOUTH HOLLAND DRIVE  
PENDERGRASS, GEORGIA 30567  
TEL: (706) 693-2226  
WWW.TENCATEGEO.US

NOTE: THE STANDARD DETAILS ILLUSTRATED IN THESE DRAWINGS ARE FOR INFORMATION AND EVALUATION PURPOSES ONLY AND ARE NOT FOR CONSTRUCTION. PROJECT SPECIFIC CALCULATIONS, SHOP DRAWINGS AND SPECIFICATIONS, SIGNED AND SEALED BY A STATE REGISTERED LICENSED ENGINEER, ARE REQUIRED FOR CONSTRUCTION.

### REINFORCED SOIL SLOPE REINFORCED SLOPE WITH MIRAFI<sup>®</sup> TM14S

STANDARD DETAIL NOT FOR CONSTRUCTION	MIRAFI® TM14S INSTALLATION	SHEET	OF
		WB	10
DATE : 4/24/19			